



# LiftSuit Washing Guide


# AUXIVO

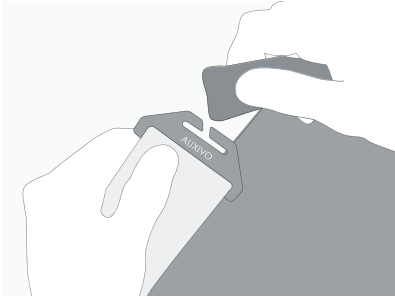

Separate the back EES and the textiles for washing.

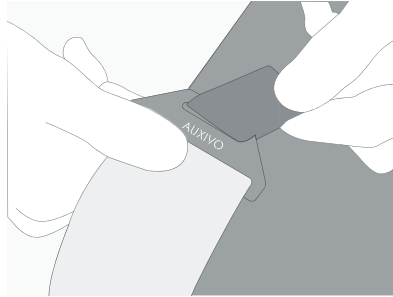

Remove the back EES by pulling the textile band to one side of the metal hook.

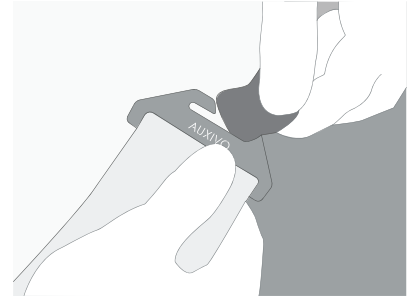


When the textile band slips out of the hook, pull it out. Repeat the process for the other connection.




Close the release buckles and place the textile parts in a washing bag.




Machine wash the textile at 30°C. Do not use fabric softener. Use mild detergent. Wash separately. Only gentle spinning.

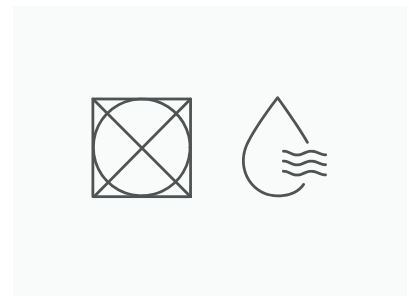


Air dry the textile components. Make sure that it is fully dried before using it.

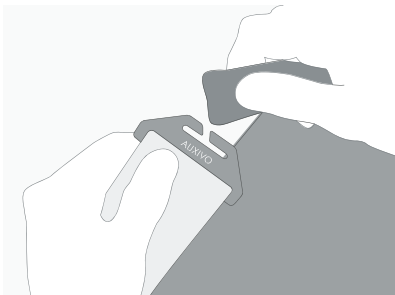


Start by inserting the longer side of the EES hook into the loop of the upper connecting strap.

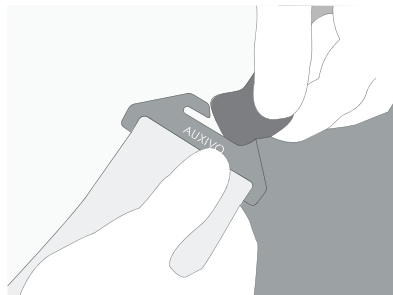


Then squeeze the loop onto the shorter side of the hook. Repeat the process for the lower connection and the other side.

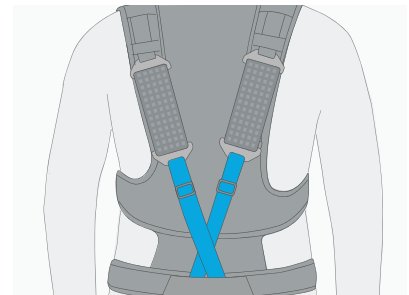

Take the strap from the opposite thigh cuff, so that the straps cross at the user's lower back.

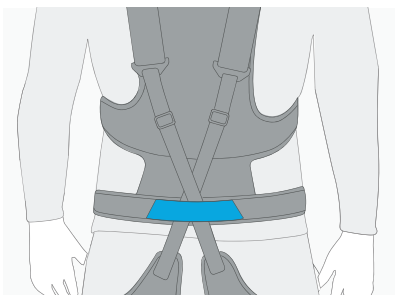

Make sure the connecting straps run through the tunnel in the hip belt.

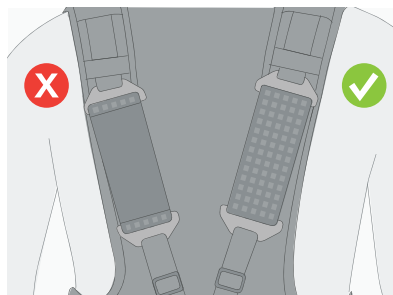

Make sure the black-white patterned side of the elastics are facing you.



The LiftSuit is again ready to support you during work.